




www.clanm.com.br

TECLADO **VE**
Walker

Manual

Instruções:

1. Abra a embalagem do produto, remova a braçadeira do cabo do teclado e insira o cabo na porta USB do computador;
2. Ao usar este teclado pela primeira vez, o sistema pode precisar instalar um driver USB e o computador procurará e instalará automaticamente o driver do teclado;
3. Após a conclusão da instalação do driver, o teclado pode funcionar normalmente.

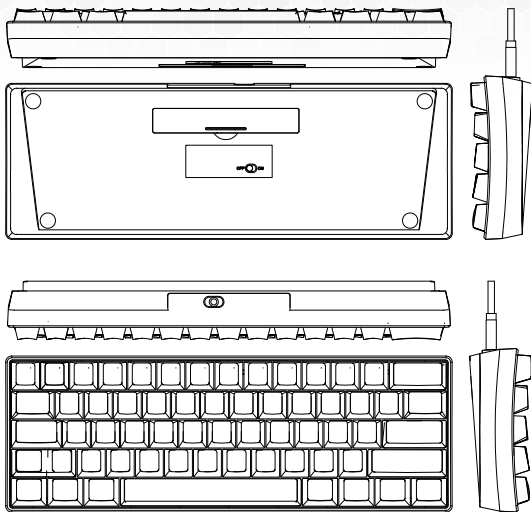

Botões de Atalhos

Pressione o botão de luz no teclado para ligar e desligar a luz de fundo;

FN + / ?	CIMA	FN + 5	F5
FN + Direita ALT	ESQUERDA	FN + 6	F6
FN + APP	BAIXO	FN + 7	F7
FN + Direita Ctrl	DIREITA	FN + 8	F8
FN + U	Tela de impressão	FN + 9	F9
FN + I	Rolar	FN + 0	F10
FN + O	Pausa	FN + "- _"	F11
FN + J	Ins	FN + "+ ="	F12
FN + K	Início	FN + Q	Página inicial
FN + L	Pageup	FN + W	Computador
FN + M	Del	FN + E	Correio
FN + , <	Fim	FN + R	Música
FN + > .	Pagedown	FN + T	Calculadora
FN + [{	Diminuir Brilho Luz	FN + A	Faixa Anterior
FN +]}	Aumentar Brilho Luz	FN + S	Próxima faixa
FN + :	Diminuir Vel. da Luz	FN + D	Reproduzir/Pausar
FN + ' "	Aumentar Vel. da Luz	FN + F	Parada de CD
FN+Backspace	Modos de Luz	FN + C	Mudo
FN + 1	F1	FN + X	Diminuir Volume
FN + 2	F2	FN + Z	Aumentar Volume
FN + 3	F3	FN + WIN	BLOQUEAR WIN&APP
FN + 4	F4	Outros modos de luz: Pressione FN + F1, FN + F2, FN + F3 ... FN+F10	